

Mounting the HHO system: jan 2023

1. Attach the 2 strap / “ Battery strap” m vehicle in desired location.
2. Pass securing strap through the two mounting Brackets.
3. Place HHO system enclosure in position on top of strap.
4. Connect 2 free ends of the strap together and tighten, securing the system enclosure in position.
5. Connect the Anderson plug attached to the 80amp double insulated cable. To the Anderson plug on the exterior of the HHO Gen 10 or Gen 15 or Gen 20 system
6. Push the free end of the 10mm Ø gas pipe into the push-lock bulkhead fitting on the front of the system enclosure.
7. Turn on Master switch, turn on engine.
8. Check current flow in the HHO generator. Maximum current cold is 24 amp.