

Venting HHO Generator system jan 2023:

- A push lock Bulkhead fitting should be mounted in the lid of the HHO Generator.
- A length of 10mm Ø piping should be connected to this bulkhead fitting.
- The free end of the pipe should be passed through an insulated fitting in the floor of the vehicle near the location where the system is mounted/ secured.
- This pipe will vent the contents of the generator system to the vehicle exterior and prevent pressure building up inside the generator.